

DSTV SETTINGS FOR HD PVR DECODERS ON A ONE CABLE SYSTEM

Using the remote of the Dstv, press MENU then
Go to ADVANCED OPTIONS – press OK
Go to DISH INSTALLTIONS press OK
Pin code 9949

Home Network Dstv IS7 - remains as is
(Frequency should be **11594** and Symbol rate **27500** – **do not change these**)
Press P+ button on the remote to access new networks.

Additional Network 1 Dstv IS7

Go to FREQUENCY
Left key to remove numbers, then enter **11210**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 2 Dstv IS7

Go to FREQUENCY
Left key to remove numbers, then enter **11250**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 3 Dstv IS7

Go to FREQUENCY
Left key to remove numbers, then enter **11290**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 4 Dstv IS7

Go to FREQUENCY
Left key to remove numbers, then enter **11330**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 5 Dstv IS7

Go to FREQUENCY
Left key to remove numbers, then enter **11370**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press P+

Additional Network 6 Dstv IS7

Go to FREQUENCY
Left key to remove numbers, then enter **11410**
Go to SYMBOL RATE
Left key to remove numbers, then enter **30000**
Go to USE NIT – right key to **SMATV**
Press the yellow button on the remote.

If this did not help, go to **FACTORY RESET**, then redo above steps.
Should you experience further problems, please contact your body corporate delegate.

