

## **DSTV SETTINGS FOR HD PVR DECODERS ON A ONE CABLE SYSTEM**

Using the remote of the Dstv, press MENU then  
Go to ADVANCED OPTIONS – press OK  
Pin code 9949  
Go to NETWORK SETUP press OK

**Home Network Dstv IS7** - remains as is  
(Frequency should be **11594** and Symbol rate **27500** – **do not change these**)  
Press P+ button on the remote to access new networks.

### **Additional Network 1 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **11210**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

### **Additional Network 2 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **11250**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

### **Additional Network 3 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **11290**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

### **Additional Network 4 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **11330**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

### **Additional Network 5 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **11370**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

### **Additional Network 6 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **11410**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+



**Additional Network 7 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **10930**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

**Additional Network 8 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **10890**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Change FEC to 2/3  
Change Modulation to 8PSK  
Press P+

**Additional Network 9 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **10850**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Change FEC to 2/3  
Change Modulation to 8PSK  
Press P+

**Additional Network 10 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **10810**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

**Additional Network 11 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **10770**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Change FEC to 2/3  
Change Modulation to 8PSK  
Press P+

**Additional Network 12 Dstv IS7**

Go to FREQUENCY  
Left key to remove numbers, then enter **10730**  
Go to SYMBOL RATE  
Left key to remove numbers, then enter **30000**  
Go to USE NIT – right key to **SMATV**  
Press P+

Press the yellow button on the remote.

If this did not help, then do a FLASH CLEARING and redo above steps.  
Should you experience further problems, please contact your body corporate delegate.