

Flash erase procedure for decoder models 642, 645, 660, 720 & 720i:

- * Press power & TV/Audio buttons on left side of display in together & release
- * Display will flash " DL "
- * While "DL" flashes, press TV/Audio & P/V buttons in together & hold down until 3 flashing lights appear on the display
- * Now release all buttons & let unit scan

Procedure for decoder models 933, 910 & 990:

- * Press first two buttons on decoder in & release (from the left hand side)
- * Display will flash " DL "
- * While "DL" flashes, press down the 2nd & 3rd buttons (from the left hand side) & hold in until 3 lights appear on the display
- * Now release all buttons & let unit scan

Procedure for decoder model 1110:

- * Press the reset button the the far right hand side of decoder
- * Display will flash "DL"
- * Now push in & hold 2nd & 4th buttons on decoder - from the left
- * Wait for 3 lights to flash on display
- * Now release all buttons & let unit scan

Procedure for Dualview decoder:

- * Press the menu & arrow down buttons in together & then release
- * Display will flash "DL"
- * Press the arrow down & exit buttons in together & hold
- * Wait for 3 lights to flash on display
- * Now release all buttons & let unit scan

Procedure for SD PVR decoder:

- * Press the P- & V+ buttons in together & then release
- * Display will flash "DL"
- * Press the P+ & V- buttons in together & hold
- * Wait for 3 lights to flash on display
- * Now release all buttons & let unit scan

Procedure on SD PVR unit to rectify situation where recorded programmes go directly to the Alert list:

- * Press the P- & V+ buttons in together & then release
- * Display will flash "DL"
- * Press the P+ & Pause/Play buttons in together & hold until the word "DONE" appears on the display
- * Now release all buttons & let unit scan.

Pace 4 Tuner: HD PVR (black)

Press TV guide on the decoder in & hold for 10 seconds
Release then press Exit
Release then press OK
Release & a green screen will appear asking for a pin code (1649)
Select Reset Factory Defaults from the list & confirm

UEC 4 Tuner: HD PVR (silver)

Press TV guide on the decoder in & hold for 10 seconds
Release then press Shift
Release then press Exit
Release then press OK
Release & a green screen will appear asking for a pin code (1649)
Select Reset Factory Defaults from the list & confirm



Pace 2 Tuner: HD PVR 2

Press the TV/Audio button in & hold for 10 seconds
Release then press the UHF button
Release then press the Pause/Play button.
Release & a green screen will appear asking for a pin code (1649)
Select Reset Factory Defaults from the list & confirm